




LK11B

INSTALLATION INSTRUCTIONS



PREPARATION FOR INSTALLATION

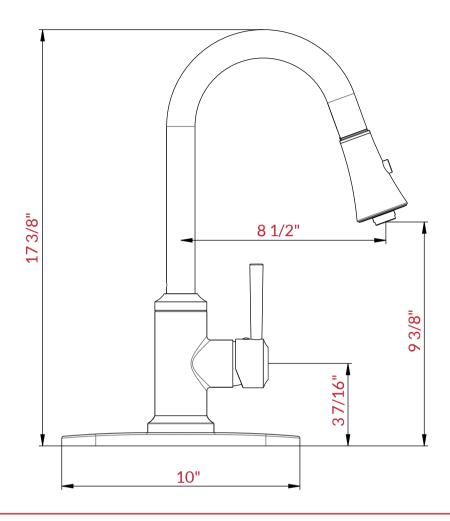

ATTENTION! Dimensions may vary by up to 3/8". It is highly recommended to pull all dimensions of actual model for installation and measuring purposes.

ATTENTION! Measurements in inches are rouned to the nearest 1/8".


TECHNICAL DATA

Max flow rate 1.8 GMP at 60 PSI



PARTS & COMPONENTS

No	Component
1	Spout Pipe
2	Plastic Nipple
3	Joint
4	Washer
5	Check Valve
3 4 5 6 7	Spray Head
	O-Ring
8	Coil Spring
9	Joint
10	Press Hat
11	Body
12	Base
13	O-Ring
14	Triangle Plank
15	Screwed Connecter
16	Washer
17	Washer
18	Lock Nut
19	Pilot Sleeve
20	Hose Weight
21	Flexible Hose
22	Flexible Hose
23	Washer
24	Joint
25	Check Valve
26	Flexible Hose
27	Base
28	Cartridge
29	Press Hat
30	Сар
31	Handle Cover
32	Screw
33	Canopy
34	Handle Shaft
35	8" Spread Deck Plate
36	Allen wrench

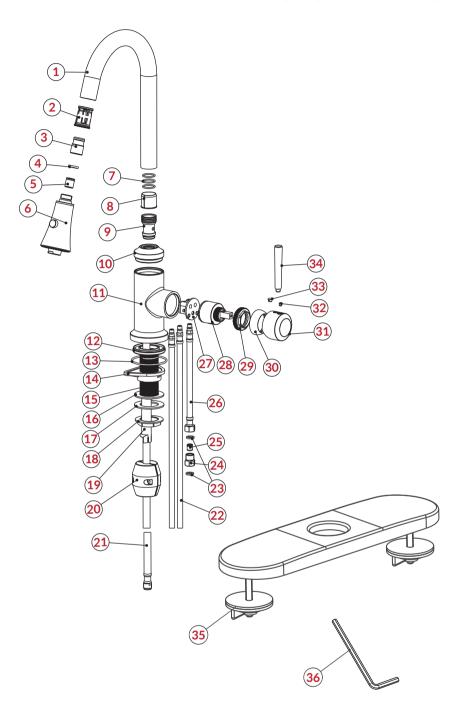

TOOLS REQUIRED FOR INSTALLATION











Basin Wrench

Adjustable Wrench

Teflon Tape


Silicone Sealant

Screwdriver


OTHER TOOLS MAY BE REQUIRED




INSTALLATION INSTRUCTIONS

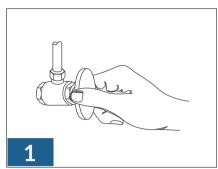


You should clean all the dirts from valve outlets. Turning off the water supply valves. This is usually found near the water meter. If you are replacing an existing faucet, remove the faucet from the sink and clean the sink surface thoroughly.

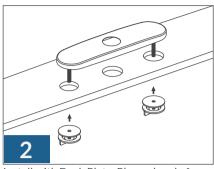


Install with Deck Plate. Place a bead of plumbers's putty between faucet and sink. Place Deck Plate over the three holes of sink. From Underside sink, tighten wing nut.a

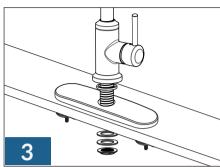

Make sure the O-RING is placed onto the bottom of Base Ring. Install faucet through Deck Plate. From underside sink, put Plastic Washer and Mounting Nut. Position Faucet on sink properly and tighten mounting nut.

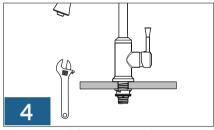


If necessary, tighten screws using an adjustable wrench util the faucet is firmly connected to the sink.

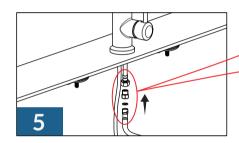

D DO OFF Washer Connect the pull-out hose with

Check valve Joint

check valve joint and the outlet tube together.(See Page 5 for detailed instruction)

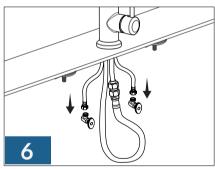


Connect hot and cold water supply lines to the Water Supply Valves




After installatiion is complete, remove Spray Head and rotate handle to close position. Turn Water Supply Valves on, and check all connections for leaks. Flush faucet by running hot and cold water in full position for one minute.



After installation is complete, remove Spray head and rotate handle to the close position. Turn Water Supply Valves on, and check all connections for leak. Flush faucet by running hot and cold water in full position for one minute. Re tighten the Spray Head.

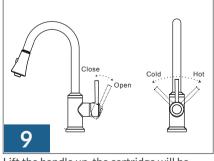

Lift the handle up, the cartridge will be activated allowing water to flow. The water flow will increase by continuing to rotate handle. By roatating the handle to the right, the water temperature will decrease to cold flow only. By rotating handle to the left, the water temperature will increase to hot only.

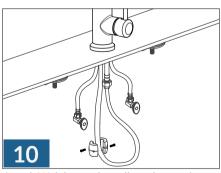

Attach Weights to the pull-out hose using screws at the proper point of the hose. Please, note that installation of weight is optional and it is not required for for proper work of the faucet.



INSTALLATION INSTRUCTIONS




Allen wrench (Optional)



Triange Plank/Support (Optional)

14

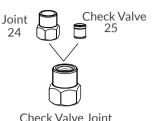



Check Valve Joint 24




Washer 23

  IMPORTANT: CHECK VALVE JOINT IS REQUIRED TO BE INSTALLED!

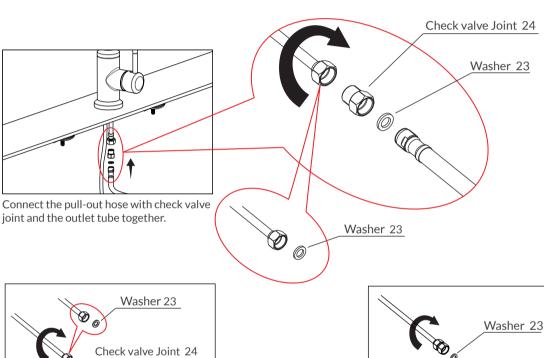





2. Put the washer (23) in the check valve joint (24), then connect the pull-out hose to the check valve joint (24) with a wrench.

TOOLS REQUIRED FOR INSTALLATION



Basin Wrench



Adjustable Wrench



Teflon Tape



Silicone Sealant



Screwdriver

OTHER TOOLS MAY BE REQUIRED





READ ALL INSTRUCTIONS BEFORE UNPACKING THE PRODUCT

INSTRUCTIONS THAT, IF IGNORED COULD RESULT IN DEATH OR SERIOUS INJURY CAUSED BY INCORRECT HANDLING OR INSTALLATION OF THE PRODUCT, THESE INSTRUCTIONS MUST BE OBSERVED FOR SAFE INSTALLATION.



INSTALLATION OF LESSCARE PRODUCTS BY AN INEXPERIENCED INSTALLER MAY RESULT PERSONAL INJURY OR DEATH!



LessCare reserves the right to change, update, modify, alter, redesign this manual/product or its policies without prior notice! It is your responsibility to visit website to download or contact customer service for the most updated version of the installation instructions.

LessCare shall not be liable for any injuries or property damages in connection with this product during installation or use of this product!

LessCare products must be installed by a fully insured and licensed plumber only. Installation of any LessCare product by anyone other than fully insured and licensed plumber shall void limited warranty. LessCare recommends that such licensed plumber have experience in the installation of products.

Limited warranty is void on any commercial installation

LessCare is not responsible for local code compliance for this product. Building and plumbing codes may vary from state-to-state in accordance to your location. LessCare is not resonsible for providing any compliance certifications.

LessCare is not responsible to provide any type of certifications for this product

Under no circumstances LessCare shall not be liable for any and all incidental damages sustained in connection with this product

Neither manufacture, nor distributor, nor retailer is responsible for water damage or flood caused due to use of this product.

Under no circumstances LessCare shall not be liable for any and all fees, cost of installation/reinstallation/removal, subsequent damage or transportation in case of the product defect

Maintenance & Care

IMPORTANT!-

DO NOT USE: Abrasive cleaners such as: acid, ammonia, bleach, and simmilar solutions. Use of such solutions may cause corrosion, finish peeling, and/or dull the surface.

DO NOT USE: Abrasive sponges or cloth. Never use steel, wool, or wired brushes that will permanently scratch the surface.

Retain these installation instructions for future reference!



Thank you for using LessCare products!